9.2 EXTERIOR SECTION

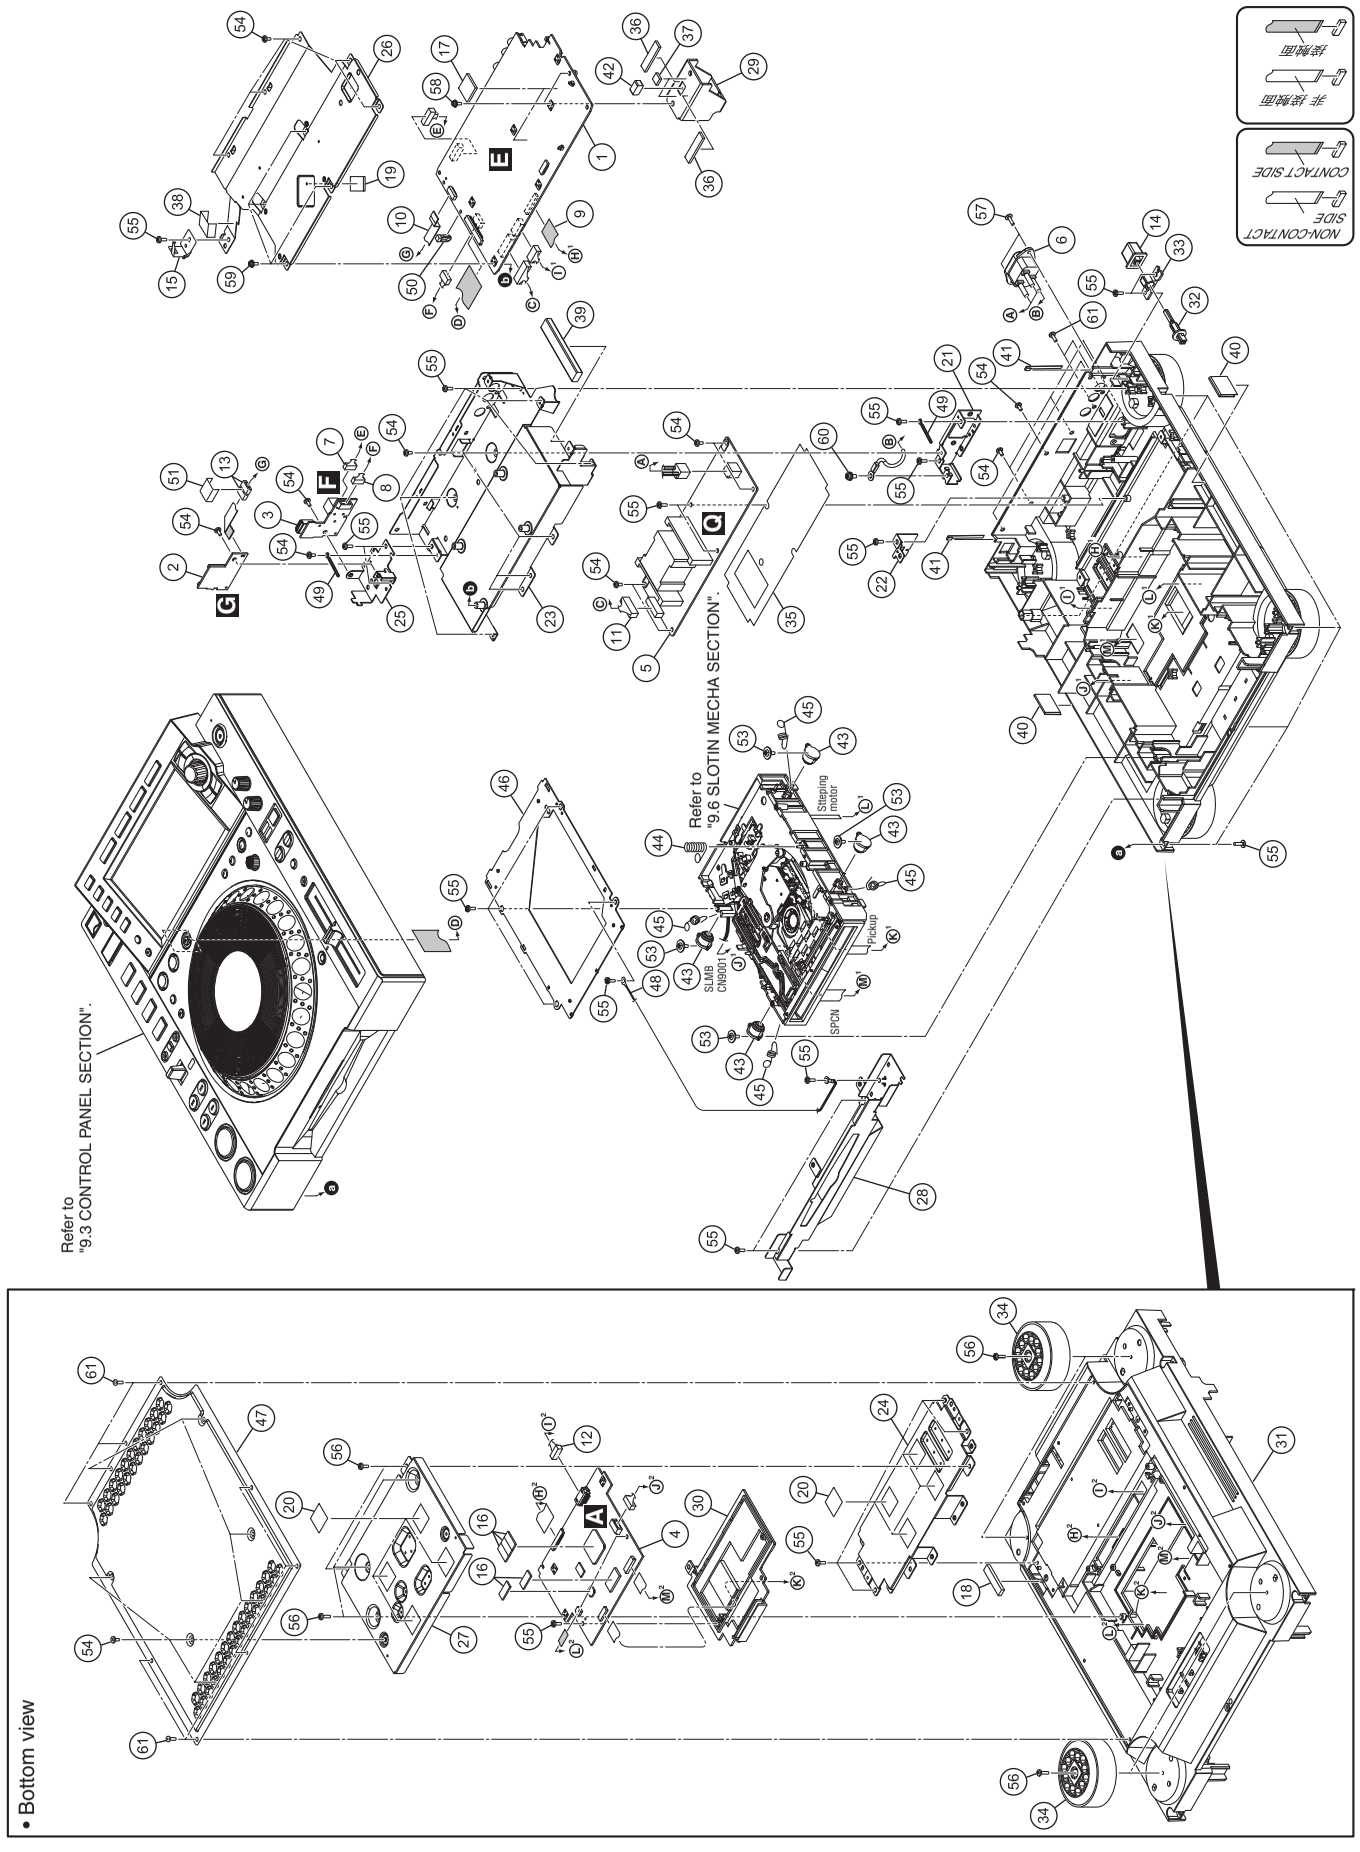

EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MAIN Assy	DWX3672
	2	SDCB Assy	DWX3694
	3	USBA Assy	DWX3695
	4	SRVB Assy	DWX3696
⚠	5	SW POWER SUPPLY Assy	DWR1548
⚠	6	AC Inlet	DKP3975
	7	Shielded Conn-Cable	DDA1053
	8	Shielded Conn-Cable	DDA1052
	9	FFC	DDD1703
	10	FFC	DDD1706
	11	Crimp Connector	DDC1024
	12	Connector Assy	PF06PP-S10
	13	Ferrite Core	BTX1037
	14	Power Knob	DAC2306
	15	SD Earth Spring	DBK1357
	16	Silicon Rubber D5 L	DEB1456
	17	Heat Cond Sheet	DEB2018
	18	Heat Cond Sheet	DEB2019
	19	Cushion	DEB2024
	20	Cushion	DEB2030
	21	Bracket/ACI	DNH3020
	22	Stay/KST	DNH3021
	23	Stay	DNH3225
	24	Stay	DNH3226
	25	Stay	DNH3227
	26	Shield Plate	DNH3229
	27	Plate	DNH3230
	28	Plate	DNH3237
	29	Heat Sink	DNH3238
	30	Servo Cover	DNK5492
⚠	31	Chassis	DNK6500
	32	Shaft	DNK6501
	33	Guide	DNK6502
	34	Insulator	DXB2169
	35	Sheet	DEC3660
	36	Heat Cond Sheet	DEB2041
	37	Heat Cond Sheet	DEB2042
	38	Cushion	DEC3679
	39	Gasket	DEC3681
	40	Cushion	DEC3687
	41	Cushion	DEC3688
	42	Gasket/JOG	DEC3562
	43	Damper	CNV7618
	44	Earth Spring	DBH1398
	45	Float Spring (G5)	DBH1494

Mark	No.	Description	Part No.
	46	Mecha Plate	DNH2339
	47	Panel	DAH3052
	48	Cord With Plug	DE007VE0
	49	Cord Clamper (Steel)	RNH-184
	50	Cable Tie	ZCA-SKB90BK
	51	Cushion	DEC3680
	52	•••••	
	53	DM Screw (FTC)	DBA1260
	54	Screw	BBZ30P060FTB
	55	Screw	BPZ30P080FNI
	56	Screw	BPZ30P100FTC
	57	Screw	IBZ30P100FTB
	58	Screw	PMB30P080FTB
	59	Screw	PMH30P080FTC
	60	Screw	PMH40P080FTC
	61	Screw	PPZ30P080FTB